





AGM Battery Maintenance Procedure



Connect the battery to the charger and plug in every day after use or when the battery discharge indicator displays red.



✓ Charge batteries in a well-ventillated area at room temperatures.

Let the battery fully charge overnight or until next use.

Leave batteries connected to the charger during weekends, holidays, and other off-days.

AGM / LEAD ACID batteries do NOT have memory effect.

▲ WARNING



Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away. Keep covers open when charging.

A AVERTISSEMENT

Les batteries émettent de l'hydrogène.
Ce gaz est susceptible d'exploser ou de s'enflammer.
Evitez toute étincelle et toute flamme nue à proximité des batteries. Laissez les capots ouverts pendant la mise en charge.

▲ ADVERTENCIA

Las baterías emiten hidrógeno gaseoso. Existe peligro de incendio o explosión. Mantenga chispas y llamas alejadas de la máquina. Mantenga las tapas abiertas durante la operación de carga.





ON-Board

OFF-Board





Confirm the charger shows the charge complete flag (green LED) before next use.





If the charger goes into any error code (e.g. E02), report it to your Tennant Service Representative.