

## ECO-17 UNPACKING & ASSEMBLY


The ECO-17 ships in two boxes and will need to be assembled before use. Follow these directions to assemble the two pieces.



1. Set the handle assembly in place and bolt it in using the two included bolts. **Thread the bolts in by hand as far as you can in order to prevent stripping of the threads in the handle.** Tighten with 5/16" allen key.

### Tools Needed:

- 5/16" allen hex key
- Needle nose pliers

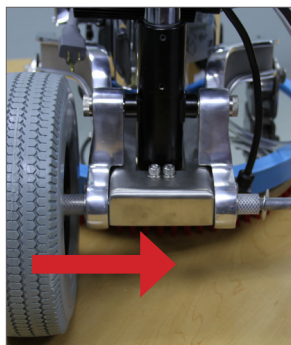

2. Remove both C-clips from the axle using needle nose pliers. Slide the wheels onto the axle. Use needle nose pliers to secure wheels with the C-clips.



3. Connect the hoses for solution spray and gravity feed as shown above.



4. Connect the power cord from the base of the handle to the motor.



5. Make sure all bolts are tightened. Your ECO-17 is now ready to operate.

### IMPORTANT: BEFORE FIRST USE

Run the new pad driver on concrete without a pad for 30 minutes. This will break in the pad driver and allow it to better hold onto attached pads.